

# PRESYS®



## Dry Block Calibrator

T-25NL and T-45NL



## Technical Manual

## EC Declaration of Conformity

We declare under our sole responsibility that the CE marked products, are in conformity with the essential requirements of the following EC Directives when installed in accordance with the installation instructions contained in the product documentation:

<b>Series</b>	<b>T-25NL, T-45NL</b>
<b>Description</b>	<b>Dry-Block Temperature Calibrator</b>
<b>LVD</b> Low Voltage Directive	2014/35/EC of the European Parliament and of the Council of 12 December 2006 on the harmonization of the laws of Member States relating to Electrical Equipment designed for use within certain voltage limits.
<b>EN 61010-1:2011</b>	Safety requirements for electrical equipment for measurement, control and laboratory use
<b>EN 61010-2:010</b>	Safety requirements for electrical equipment for measurement, control and laboratory use - Part 2-010: Particular requirements for laboratory equipment for the heating of Materials.
<b>EMC directive</b>	2004/108/EC of the European Parliament and of the Council of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC
<b>EN 61326-1:2003</b>	Electrical equipment for measurement, control and laboratory use - EMC requirements

São Paulo, 8 September 2015

	
Vinicius José Gomes Nunes CEO	Antonio Rafael Sito Antunes Engineering Manager



## WARNING!

Avoid electric shock risk on touching the equipment:

- Use only suitable power cable with earth connection;
  - Never power the equipment to the mains socket with no earth connection.
- 



## WARNING!

High voltage is present inside these equipments. It can cause great damages and injuries.

Do not make any repair service inside the equipment without removing the plug from the supply.

---



## WARNING!

Much electromagnetic noise can cause instability to the equipment.

The equipment is provided with electromagnetic interference filters that protect not only the mains but also the equipment itself against noise. These filters have no function if the unit is not earthed properly.

---



## WARNING!

High temperatures are achieved in these equipments.

Risk of fire and explosion are present in case safety measures are not taken. Sign by means of warnings the hazardous areas at high temperatures.

Do not place the dry-block on inflammable surfaces or even on materials that can be deformed due to high temperatures.

Do not obstruct any air-vent to avoid risk of fire in the equipment.

---



## WARNING!

The instruments described in this technical manual are equipment for use in specialized technical area.

The user is responsible for configuration and selection of values of the parameters of the instruments.

The manufacturer warns against the risk of incidents with injuries to both persons and property, resulting from the incorrect use of the instrument.

---



## WARNING!

Never remove the insert from the dry-block or the thermo-elements from the insert, while they are in temperatures far from the ambient. Wait until they reach the ambient temperature so that the heterogeneous cooling of the parts do not jam each other. If, by chance, it happens a jamming situation, refer to item *Instructions for Insert Jamming* to proceed properly.

---

## Disposal calibrator:



### NO HOUSEHOLD WASTE!

The calibrator of the series T Calibrator consist of various different materials. It must not be disposed of with household waste.

---

The warranty conditions are available in our site:

**[www.presys.com.br/warranty](http://www.presys.com.br/warranty)**

## Table of Contents

<b>1 - Introduction</b>	<b>1</b>
1.1 - Technical Specifications	3
1.1.1 - Input Technical Specifications	4
1.2 - Order Code	4
1.3 - Accessories	5
1.4 - Instructions for Optional:	6
<b>2 - Calibrator Operation</b>	<b>9</b>
2.1 - Menu IN	10
2.1.1 - Input Connections Diagrams	11
2.1.2 – External Probe Connection	12
2.2 - Menu CONF	13
2.3 - Manual Operating Mode	17
2.4 - Programmable Operating Mode	17
2.5 - Automatic Operating Mode	18
<b>3 - Recommendations as regards Accuracy of Measurements</b>	<b>20</b>
3.1 - Getting a Better Accuracy from the Dry Block	20
3.2 - Recommendations to Other Types of Insert	21
<b>4 - Safety Instructions</b>	<b>21</b>
<b>5 - Calibrator Warning Messages</b>	<b>22</b>
<b>6 - Calibration (Adjustment)</b>	<b>22</b>
6.1 - Input Calibration	23
6.2 - Probe Calibration	24
<b>7 - Maintenance</b>	<b>25</b>
7.1 - Instructions for Hardware Maintenance	25
7.2 - Instructions for Insert Jamming	25

## 1 - Introduction



**T-25NL / T-45NL**

**T-25NL** and **T-45NL** control temperature of an insert in order to calibrate thermocouples, thermoresistances, glass thermometers, thermoswitches etc. Besides providing high accuracy temperature values, they also allow the measurement of signals generated by thermo-elements like thermocouples, RTDs and thermoswitches, which are being calibrated. This is possible due to an embedded calibrator specific for these types of signal, including 4-20 mA. Thus, they incorporate the functions of dry block, standard thermometer and calibrator for RTD, TC and also mA.

The calibrator also includes an external probe input to allow the temperature control from a standard PRT sensor (optional) placed in the insert together with the sensors to be calibrated, increasing accuracy and decreasing setpoint errors and block loading effects. The sensor calibration curve is configured according to the Callendar-Van Dusen parametrization.

- T-45NL calibrator model generates temperatures from -45 °C to 155 °C and T-25NL calibrator model generates temperatures from -25 °C to 155 °C.
- Presents input for thermocouples, RTDs, thermoswitches. Besides generating temperature, it measures the signal from the sensor being calibrated.
- Allows the control of the dry block temperature by using an external probe (optional). The temperature calculation uses Callendar-Van Dusen coefficients.
- Makes no use of external standard thermometer.
- Carries out completely automatic calibrations with or without the use of a computer.
- Display accuracy up to 0.1 °C, stability of 0.02 °C and resolution of 0.01 °C.
- Documenting capabilities: communication with computer and the ISOPLAN Calibration Software.
- Portable, compact, provides interchangeable inserts and soft carrying case.

They present a wide variety of programming resources, allowing the performance of automatic calibrations of thermocouples, thermoresistances, thermoswitches. In this case, the sensor is placed in the insert and its electrical terminals are connected to the

embedded calibrator. The operator defines the calibration points and the number of repetitions, then the process is started and all the sequence is automatically accomplished.

Another way of performing automatic documented calibrations is by means of the ISOPLAN Calibration Software for PC/Windows<sup>TM</sup>, which uses RS-232 or RS-485 serial communication to connect the computer to the calibrator. With ISOPLAN it is possible to register sensors and instruments of a factory, generate work orders, create and print calibrations certificates and reports, that is, it brings all advantages of computer data management to the calibration environment.

**T-25NL** and **T-45NL** have also many other features, such as:

- The electric signal calibrator is independent from the dry block function.
- Internal buzzer beeps when the temperature reaches the desired value.
- Keypad that eases the operation and configuration of the calibrator.
- Graphic fluorescent vacuum display to present big-size digit numbers.
- Thermo-element reading scaled to ITS-90 or IPTS-68.
- Internal regulated 24 Vdc power supply for 2-wire transmitters.
- Internal rechargeable battery and battery charger included in the electric signal calibrator.
- Independent circuit for over-temperature protection and safety.
- Insert to choose, carrying case, strap and test leads included.

## 1.1 - Technical Specifications

	T-25NL	T-45NL
<b>Operating Range</b> Ambient Temperature: up to 23 °C	-25 °C to 155 °C	-45 °C to 155 °C
<b>Display Accuracy</b>	$\pm 0.1$ °C	
<b>Resolution</b>	0.01 °C or 0.01 °F	
<b>Stability</b>	$\pm 0.02$ °C	
<b>Axial Uniformity (40 mm)</b>	$\pm 0.06$ °C (Dry Block) $\pm 0.025$ °C (Stirred Liquid)	$\pm 0.08$ °C (Dry Block) $\pm 0.025$ °C (Stirred Liquid)
<b>Radial Uniformity</b>	$\pm 0.02$ °C (Dry Block) $\pm 0.02$ °C (Stirred Liquid)	$\pm 0.025$ °C (Dry Block) $\pm 0.02$ °C (Stirred Liquid)
<b>Heating Rate</b>	25 min (25 °C to 155 °C)	20 min (25 °C to 155 °C)
<b>Cooling Rate</b>	20 min (25 °C to -25 °C)	40 min (25 °C to -45 °C)
<b>Weight</b>	12.0 kg	
<b>Power Supply</b>	115 Vac or 230 Vac 50/60 Hz, according to the order code	
<b>Power Consumption</b>	300 W	400 W
<b>Units / Temperature Scales</b>	°C or °F / IPTS-68 or ITS-90, selected by the user	
<b>Well Diameter / Depth</b>	Ø 35 mm (1") x 160 mm	
<b>Dimensions (H,W,D)</b>	315 x 180 x 270 mm	
<b>Environmental Operating Conditions</b>	0 to 50 °C / 0 to 90 % RH	

Note: The times presented refer exclusively to the use of the metallic insert (dry block). For use with stirred liquid insert the time may vary according to the fluid used and its viscosity.

The uniformity values given for stirred liquids are valid only when using the fluids listed in section 1.4 - Instructions for use of the options.

### 1.1.1 - Input Technical Specifications


Input Ranges	Resolution	Accuracy	Remarks
Ext. Probe <sup>1</sup> 0 to 400 $\Omega$	0.01 $\Omega$	$\pm 0.005\%$ FS	
Ext. Probe <sup>1</sup> -200 to 850 $^{\circ}\text{C}$ / -328 to 1562 $^{\circ}\text{F}$	0.01 $^{\circ}\text{C}$ / 0.01 $^{\circ}\text{F}$	$\pm 0.05\%$ $^{\circ}\text{C}$ / $\pm 0.1\%$ $^{\circ}\text{F}$	IEC-60751
millivolt -150 to 150mV 150 to 2450mV	0.001mV 0.01mV	$\pm 0.01\%$ FS $\pm 0.02\%$ FS	R <sub>input</sub> > 10M $\Omega$ auto-ranging
mA -1 to 24.5mA	0.0001 mA	$\pm 0.01\%$ FS	R <sub>input</sub> < 160 $\Omega$
Resistance 0 to 400 $\Omega$ 400 to 2500 $\Omega$	0.01 $\Omega$ 0.01 $\Omega$	$\pm 0.01\%$ FS $\pm 0.03\%$ FS	excitation current 0.9 mA (auto-range)
Pt-100 -200 to 850 $^{\circ}\text{C}$ / -328 to 1562 $^{\circ}\text{F}$	0.01 $^{\circ}\text{C}$ / 0.01 $^{\circ}\text{F}$	$\pm 0.1\%$ $^{\circ}\text{C}$ / $\pm 0.2\%$ $^{\circ}\text{F}$	IEC-60751
Pt-1000 -200 to 400 $^{\circ}\text{C}$ / -328 to 752 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 0.1\%$ $^{\circ}\text{C}$ / $\pm 0.2\%$ $^{\circ}\text{F}$	IEC-60751
Cu-10 -200 to 260 $^{\circ}\text{C}$ / -328 to 500 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 2.0\%$ $^{\circ}\text{C}$ / $\pm 4.0\%$ $^{\circ}\text{F}$	Minco 16-9
Ni-100 -60 to 250 $^{\circ}\text{C}$ / -76 to 482 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 0.2\%$ $^{\circ}\text{C}$ / $\pm 0.4\%$ $^{\circ}\text{F}$	DIN-43760
TC-J -210 to 1200 $^{\circ}\text{C}$ / -346 to 2192 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 0.2\%$ $^{\circ}\text{C}$ / $\pm 0.4\%$ $^{\circ}\text{F}$	IEC-60584
TC-K -270 to -150 $^{\circ}\text{C}$ / -454 to -238 $^{\circ}\text{F}$ -150 to 1370 $^{\circ}\text{C}$ / -238 to 2498 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$ 0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 0.5\%$ $^{\circ}\text{C}$ / $\pm 1.0\%$ $^{\circ}\text{F}$ $\pm 0.2\%$ $^{\circ}\text{C}$ / $\pm 0.4\%$ $^{\circ}\text{F}$	IEC-60584
TC-T -260 to -200 $^{\circ}\text{C}$ / -436 to -328 $^{\circ}\text{F}$ -200 to -75 $^{\circ}\text{C}$ / -328 to -103 $^{\circ}\text{F}$ -75 to 400 $^{\circ}\text{C}$ / -103 to 752 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$ 0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$ 0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 0.6\%$ $^{\circ}\text{C}$ / $\pm 1.2\%$ $^{\circ}\text{F}$ $\pm 0.4\%$ $^{\circ}\text{C}$ / $\pm 0.8\%$ $^{\circ}\text{F}$ $\pm 0.2\%$ $^{\circ}\text{C}$ / $\pm 0.4\%$ $^{\circ}\text{F}$	IEC-60584
TC-E -270 to -150 $^{\circ}\text{C}$ / -454 to -238 $^{\circ}\text{F}$ -150 to 1000 $^{\circ}\text{C}$ / -238 to 1832 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$ 0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 0.3\%$ $^{\circ}\text{C}$ / $\pm 0.6\%$ $^{\circ}\text{F}$ $\pm 0.1\%$ $^{\circ}\text{C}$ / $\pm 0.2\%$ $^{\circ}\text{F}$	IEC-60584
TC-N -260 to -200 $^{\circ}\text{C}$ / -436 to -328 $^{\circ}\text{F}$ -200 to -20 $^{\circ}\text{C}$ / -328 to -4 $^{\circ}\text{F}$ -20 to 1300 $^{\circ}\text{C}$ / -4 to 2372 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$ 0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$ 0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 1.0\%$ $^{\circ}\text{C}$ / $\pm 2.0\%$ $^{\circ}\text{F}$ $\pm 0.4\%$ $^{\circ}\text{C}$ / $\pm 0.8\%$ $^{\circ}\text{F}$ $\pm 0.2\%$ $^{\circ}\text{C}$ / $\pm 0.4\%$ $^{\circ}\text{F}$	IEC-60584
TC-L -200 to 900 $^{\circ}\text{C}$ / -328 to 1652 $^{\circ}\text{F}$	0.1 $^{\circ}\text{C}$ / 0.1 $^{\circ}\text{F}$	$\pm 0.2\%$ $^{\circ}\text{C}$ / $\pm 0.4\%$ $^{\circ}\text{F}$	DIN-43710

FS: Full Scale

Note (1): Accuracy referring only to input for external probe. The value does not include sensor accuracy or errors resulting from the sensor characterization.

Accuracy values are valid within one year and ambient temperature range from 20 to 26  $^{\circ}\text{C}$ . Outside these limits add 0.001 % FS /  $^{\circ}\text{C}$ , taking 23  $^{\circ}\text{C}$  as the reference temperature. For thermocouples with internal cold junction compensation, add a cold junction compensation error of  $\pm 0.2\%$   $^{\circ}\text{C}$  or  $\pm 0.4\%$   $^{\circ}\text{F}$

### 1.2 - Order Code

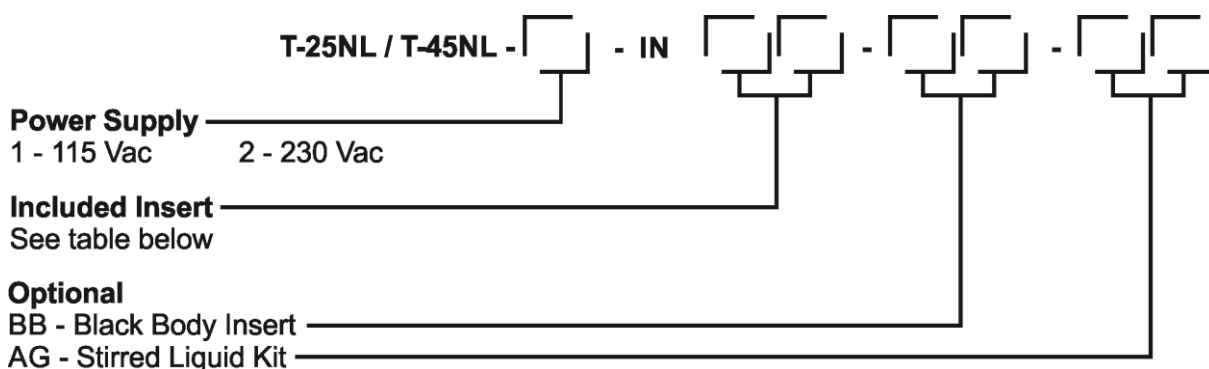



### 1.3 - Accessories

- **Insert:**

Inserts	Holes	Order Code
IN01	1 x 3/4"	06.04.0041-00
IN02	1 x 1/2"	06.04.0042-00
IN03	1 x 6.0 mm and 3 x 1/4"	06.04.0043-00
IN04	3 x 6.0 mm and 1 x 1/4"	06.04.0044-00
IN05	4 x 6.0 mm	06.04.0045-00
IN06	2 x 6.0 mm and 2 x 1/4"	06.04.0046-00
IN07	1 x 6.0 mm, 1 x 8.0 mm and 1 x 3/8"	06.04.0047-00
IN08	1 x 6.0 mm, 1 x 3.0 mm and 2 x 1/4"	06.04.0048-00
IN09	without hole, to be drilled by the client.	06.04.0049-00
IN10	Others, under ordering.	06.04.0050-00
IN1P	1x 3.0 mm, 1x 6.0 mm, 1x 8 mm, 1x 1/4"	06.04.0125-00
IN1A	1x 1/8", 1x 3/16", 2x 1/4" e 1x 3/8"	06.04.0126-00
IN1E	1x 4.0 mm, 1x 6.0 mm, 1x 8 mm, 1x 10.0 mm, 1x 1/4"	06.04.0127-00

- **Stirred Liquid Kit**

Order Code: AG

Includes: magnetic stirrer, sensor guide, sensor support kit and specific kit for glass thermometers and carrying case for the kit . For use with two or more different fluids, it is recommended to purchase a kit for each fluid. This reduces the time spent with fluid exchange and hygiene of the kit.

- **Black Body Insert**

Order Code: BB

Includes: Fully anodized cup like insert - special black wall and background, creating a black body cavity with high emissivity for calibration of infrared thermometers.

- **Temperature Sensors:**

Description	Order Code
1/5 DIN Probe R - straight (mini-DIN connector)	04.06.0001 - 21
1/5 DIN Probe 90° bend (mini-DIN connector)	04.06.0002 - 21

- **Interfaces de Comunicação:**

Description	Order Code
RS-232 - DB-9 (F) Connector (COM1)	06.02.0002 - 00
RS-485	06.02.0006 - 00

- **Soft Carrying Case.** Order Code: 06.01.1016-00


- **ISOPLAN Software.**

- **Calibration Certificate.**


## 1.4 - Instructions for Optional:

- ***Stirred Liquid Insert with sensors.***

There are two ways of use:

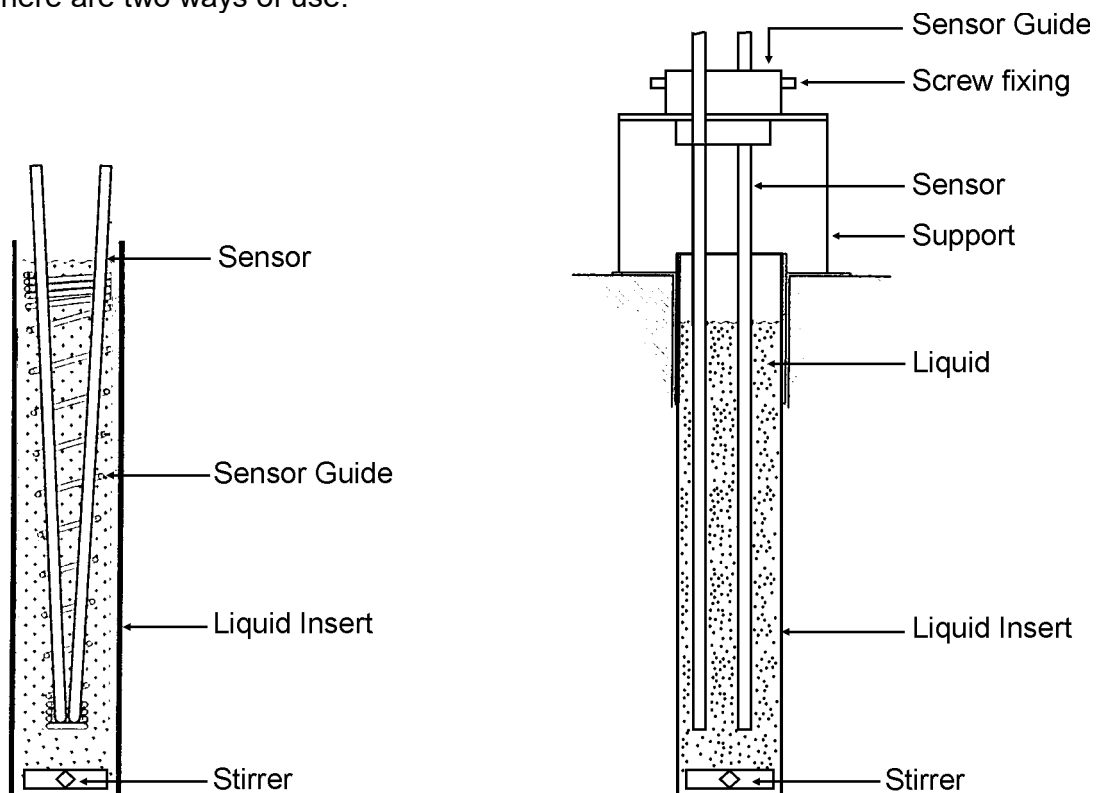


- ***Stirred Liquid Insert with Glass Thermometer.***

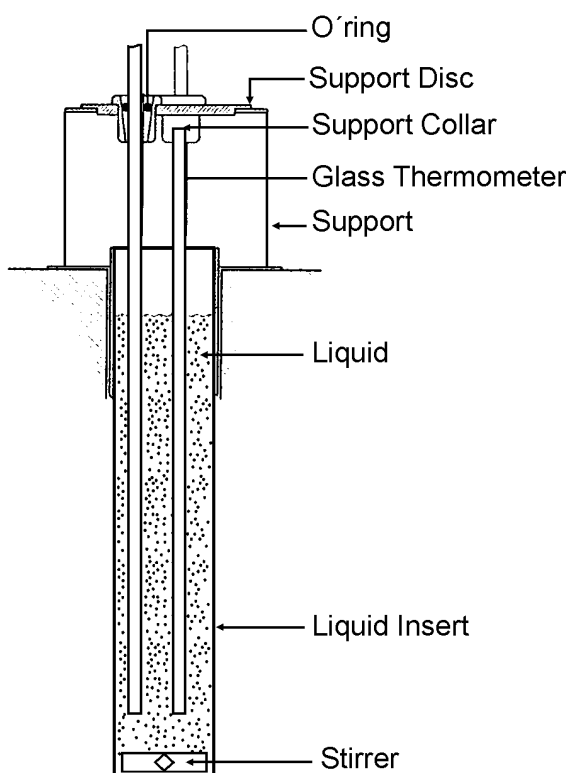

- **Thermal Fluids suitable for use with the insert (AG)**

Low viscosity and safe operating temperature are the most important characteristics when choosing a heat transfer fluid to produce high homogeneity in the bath. How less viscous, how better the fluid circulation will be and homogeneous heat produced in the middle.

We recommend using the following heat transfer fluids for models T-25NL and T-45NL:

Viscosity	Fluid	Flash point*	Usable range
 Viscosity increases	ethyl alcohol	16 °C	-50 °C to 15 °C
	Mixture of ethylene glycol and water (50% of each)	-----	-30 °C to 90 °C
	Water	-----	5 °C to 90 °C
	Silicone oil type 200.05	133 °C	-40 °C to 130 °C
	Silicone oil type 200.10	211 °C	-30 °C to 209 °C

\*Flash point is the temperature at which a vapor will ignite if exposed to a flame. When the flame is removed, the vapor stops burning.

At temperatures near the lower end of the usable range, the thermal fluid becomes very viscous which can disturb the circulation and increase the cooling time. Above the upper end, there is high evaporation of the fluid compromising the stability of the thermal medium.

If you use the insert with stirred liquid it is necessary to insert the magnetic stirrer (cross shape) at the bottom of the provided insert. The speed of the stirrer is regulated through the front panel knob. A good fit ensures good uniformity for various types of fluids: alcohol (low temperature), silicone oil (high temperature) etc.

Be careful not to accelerate too much the motor so that the magnetic stirrer stops rotating at the bottom of the insert. This will worsen the good homogeneity of the calibrator.

To use the insert with the stirred liquid, it is a good practice to first place the probe rods or thermometers to be calibrated and then fill with liquid until the level is about 2.5 cm below the edge of the insert. This ensures non-overflow, either by the introduction of sensors or by thermal expansion of the fluid.

For more accurate measurements use a calibrated probe placed together with the sensors to be calibrated and connected to the external probe input. The calibrator will now control the temperature of the block using this temperature as reference (see item 2.1.2 - External Probe Connection).

If the level starts to lower during use due to evaporation of the fluid level adding more reestablish fluid. In this way the minimum immersion will not be compromised.

### Black Body Insert


Placing the BB insert inside the well of the calibrator it turns the bath into an excellent black body cavity, with emissivity above 0.95, well suited for calibration of infrared thermometers.

In this case leave the stirrer in the off position.

For more accurate measurements use a calibrated probe placed in the side hole of the bath and connected to the external probe port. The calibrator will then control the block temperature using this temperature as a reference. It is also possible to read the indication of a probe at the Pt-100 RTD auxiliary input, if it does not have Callendar-Van Dusen curve parameters.

Align the infrared thermometer to be calibrated with the black body cavity of the bath upright.

Observe the distance of the thermometer to be calibrated against the bottom of the black body cavity as specified in the infrared thermometer technical manual.

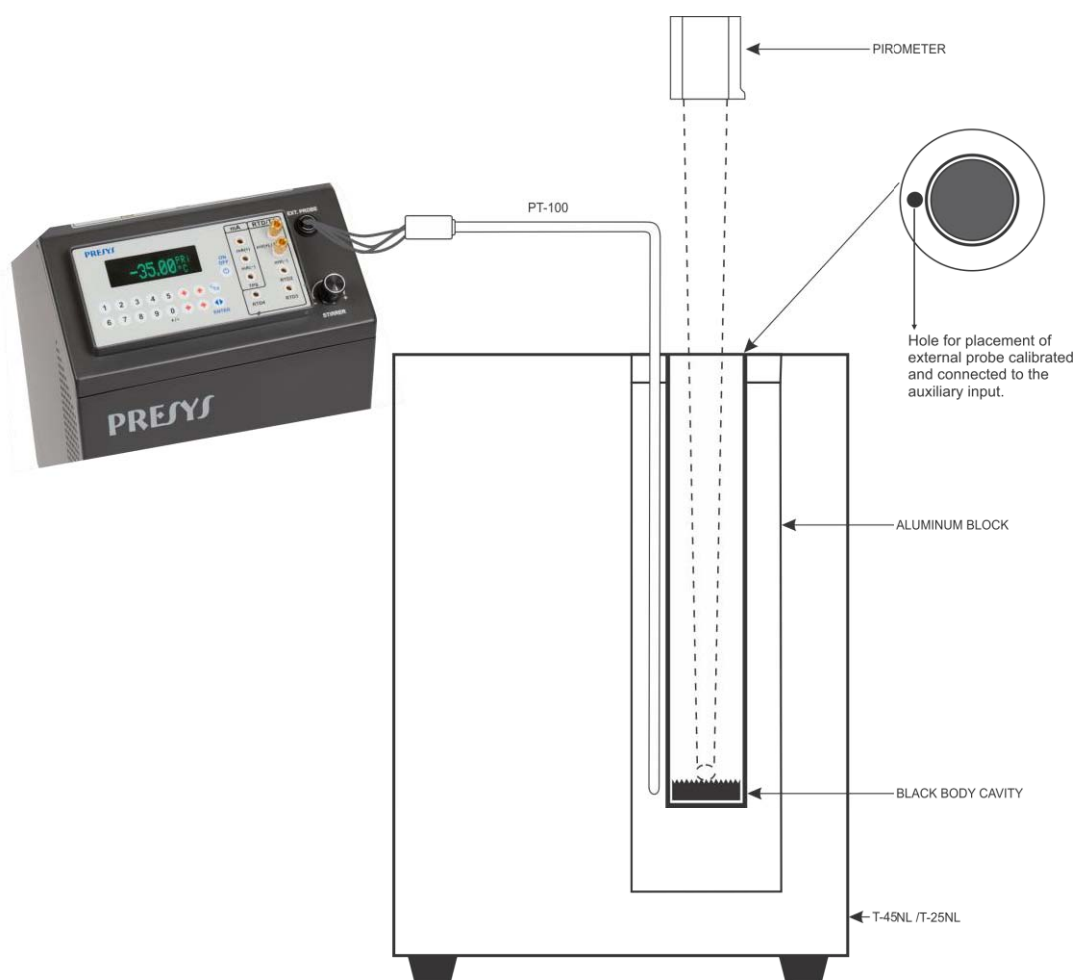

**SCHEMATIC VIEW OF THE BLACK BODY CAVITY ASSEMBLY**

## 2 - Calibrator Operation

The calibrator keeps the block temperature controlled and allows the reading of a thermo-element connected to its terminals. It is possible to verify the thermocouple, thermoresistances, temperature transmitters etc. together with the block temperature value and temperature setpoint.

The calibrator has 3 operating modes:

*Manual Mode* to select the block temperature directly from the keypad.

- *Programmable Mode*: 6 different programs with 11 temperature setpoint values. The block temperature is selected among the programmed values by the keys  $\uparrow$  and  $\downarrow$ . The *Programmable Mode with Timer* scans automatically the temperature setpoints.
- *Automatic Mode* to calibrate thermo-elements. The thermo-elements calibration is performed in an automatic way by the calibrator: the schedule and the calibration results, besides the thermo-element readings are stored in the calibrator memory.

When powered on (**ON/OFF** key), the calibrator goes through a self-test routine and shows the last calibration date and the value of the battery voltage. The battery voltage is constantly monitored and the low battery warning is provided. After the self-test is completed, the display shows the starting menu.

$\Rightarrow$ IN	EXEC	
CONF	CAL	COM

The initial setpoint is 25.00 °C:

By means of keys  $\uparrow$ ,  $\downarrow$ ,  $\Leftarrow$  and  $\Rightarrow$ , choose the menu options and press **ENTER**.

**IN**: selection of the calibrator signal input. Choose mV, ohms, thermocouple, RTD, mA, switch or none. More details in item 2.1 - *Menu IN*.

**EXEC**: The calibrator enters the manual or programmable operating mode.

**CONF**: Accesses the calibrator configuration options. More details in item 2.2 - *Menu CONF*.

**CAL**: This option accesses the calibrator adjustment functions, protected by password. More details in section 6 - *Calibration (Adjustment)*.

**COM**: Accesses the automatic calibration parameters. It is possible to perform a calibration without a computer or using it (via the ISOPLAN software). More details in item 2.5 - *Automatic Operating Mode*.

## 2.1 - Menu IN

⇒ mV	OHM	TC	
RTD	mA	SW	NO

**mV, mA, SW:** selects millivolt, milliampere or switch input, respectively.

**OHM:** selects ohms input. Following, choose from the menu the wiring in 2, 3 or 4-wire.

⇒ 2-WIRE	3-WIRE
4-WIRE	

**TC:** selects thermocouple input. Choose among the **J, K, T, E, N** and **L** types. In the next menu, the internal or manual cold junction compensation is chosen.

⇒ INTERNAL
MANUAL

If the internal compensation is selected, the cold junction temperature value is displayed by the calibrator. If the **MANUAL** option is selected, the cold junction must be supplied by the operator. After confirming the value, by pressing **ENTER**, the calibrator goes back to the operating mode.


**RTD:** Selects the type of thermoresistance used. Choose from **PT100, NI100, CU10** and **PT1000** types. Choose also if the wiring is 2, 3 or 4-wire.

**NO:** Disables reading of external signal.


Selecting one of the options above, the calibrator goes straight to the manual operating mode, with no need to select the **EXEC** option.

## 2.1.1 - Input Connections Diagrams


Millivolts

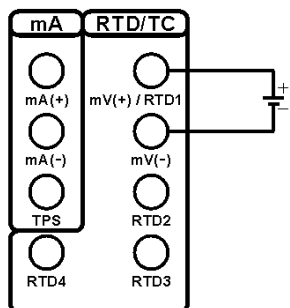


Thermocouple (TC)

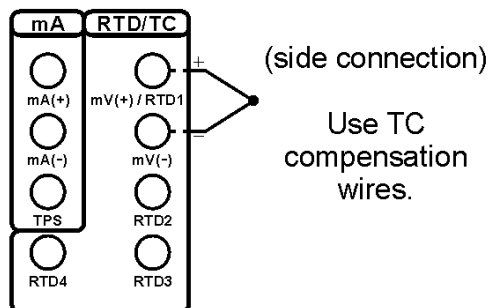


Ohm / RTD  
(2-wire)

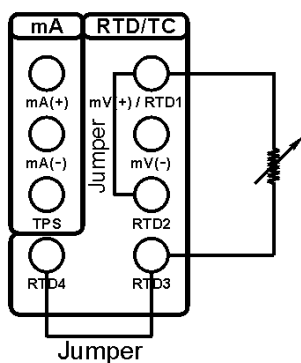


Ohm / RTD  
(3-wire)

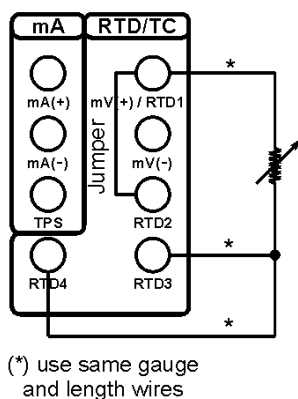


Ohm / RTD  
(4-wire)

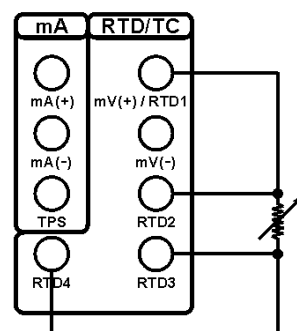


mA

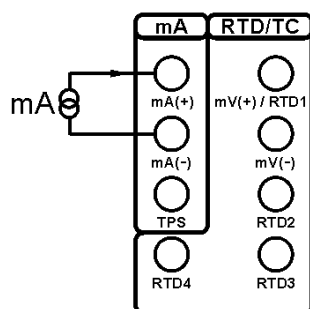

mA with power supply

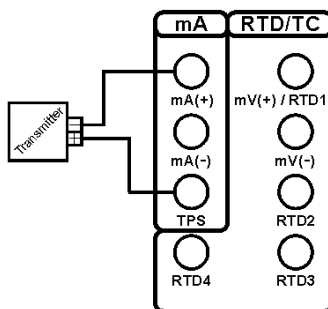


Switch (SW)

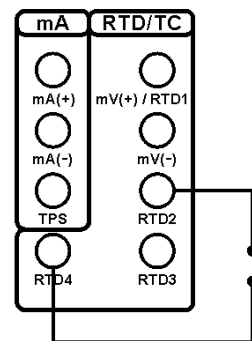

### 2.1.2 – External Probe Connection

Place the 4-wire Pt-100 standard sensor into the insert and plug the mini-DIN connector to the external probe input (**EXT. PROBE**) located on the calibrator front panel, as illustrated in the figure below:

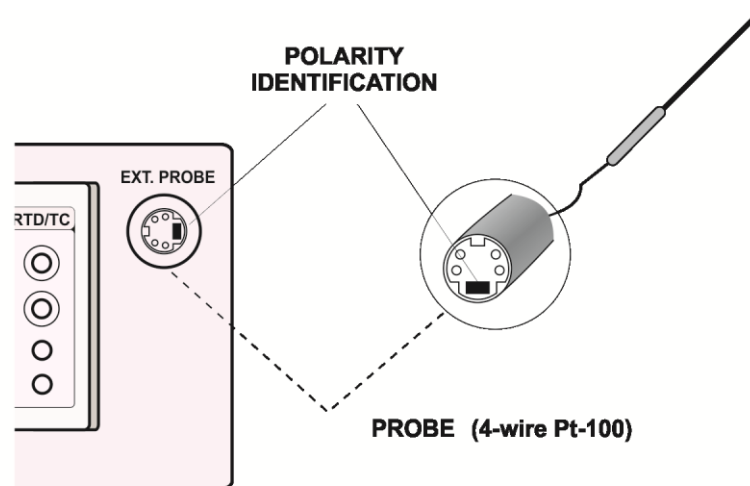

The temperature control with the external probe must be enabled by the **PRBe** option of the **PRG** menu. More details in item 2.2 - *Menu CONF*.



## 2.2 - Menu CONF

⇒ CF	PRG	MEM	LCD
SC	BT	DT	BZ

**CF:** Selects the temperature unit between °C or °F. The ITS-90 or IPTS-68 temperature scales are selected for both the thermo-element and for the internal block reference readings purpose.

⇒ °C-90	°F-90
°C-68	°F-68

**LCD:** This option sets the graphic fluorescent vacuum display contrast. Use the key ↑ and ↓ until you get a better contrast and finish the operation by pressing the key **ENTER**.

**BT:** Shows the battery or the battery charger voltage value if the dry block is turned off or on, respectively.

Battery level	Battery state	Display
4.0 to 7.0 V	normal	-----
< 4.0 V	low	LOW BATTERY

**DT:** Updates the date and time of the calibrator. Thus, when the calibrator performs a calibration in the automatic mode via ISOPLAN, all data are registered together with date and time of occurrence. Every time the calibrator is powered off, the internal clock does not continue to be updated. However, the ISOPLAN software can automatically update the calibrator date and time with the computer internal clock. Otherwise, use keys ↑ and ↓ to change the field that blinks and the keys ⇒ and ⇐ to go to another field. The key **ENTER** confirms the last selection.

**BZ:** Menu that configures the piezoelectric buzzer.

⇒ NO	YES	ENDCAL
------	-----	--------

**NO:** Disables the buzzer.

**YES:** The buzzer beeps when the block reaches the setpoint and stabilizes.

**ENDCAL:** The buzzer beeps only at the end of a calibration in the automatic operating mode.

**PRG:** Menu that programs the calibrator.

⇒ DEC_IN	DEC_PRB
SP	PRBe MD

**DEC\_IN:** Selects the number of decimals of the thermo-element reading. The default value depends on the input signal.

⇒ DEFAULT
0 1 2 3 4

**DEC\_PRB:** Selects the number of decimals of the block temperature and the setpoint value. The default number is 2.

0 1 ⇒ 2
---------

**SP:** Enables the calibrator *Programmable Operating Mode*, and allows the configuration of programmed values. The selected program is indicated by the selection arrow. Choose one of the **6** temperature programs or **NO** to disable this *Programmable Mode*.

Select any of the 6 programs and confirm with the key **ENTER**. Following, it is shown the menu of temperature setpoint configuration.

⇒ 10%	20%	25%
VARIABLE		

Change the configuration to steps (STEPS) of **10%**, **20%**, **25%**, **VARIABLE** or press **C/CE** to maintain the configuration already stored in memory. The temperature range of the program must be configured through the values in **SETPOINT HIGH** and **SETPOINT LOW** in case of **10%**, **20%** or **25%** fixed steps of the range. The option **VARIABLE** allows the user to define from 2 to 11 values of temperature setpoint, not necessarily in ascending order.

To verify the step values of a program, select the **VARIABLE** option and confirm the values shown in the display with the key **ENTER**. The **10%**, **20%** and **25%** options change the number of steps automatically and recalculate the values according to **SETPOINT HIGH** and **SETPOINT LOW**.

**PRBe:** This option enables the use of an external probe for the dry block temperature control when selecting **YES**. In order to use the internal probe, select **NO**. When enabling the external probe, configure the probe calibration parameters in the **PARAM** menu and the temperature unit in **CF** as degrees Celsius or Fahrenheit. The calibration parameters correspond to the  $R_0$ , A, B, and C coefficients of the Callendar-Van Dusen equation:

$$R(t) = R_0 \{1 + A.t + B.t^2 + C.t^3.(t - 100 \text{ } ^\circ\text{C})\}, C = 0 \text{ for } t \geq 0.$$

This equation is generally used in the IPTS-68 temperature scale, where  $t$  refers to the temperature in this scale and  $R_0$  to the resistance at 0 °C. However, it can also be used in the ITS-90 scale.

The menu for the configuration of these coefficients is shown below:

⇒ R0	A	B	C
E_A	E_B	E_C	

To enter the value of a coefficient, it must be split into a mantissa and an exponent as it is used in scientific notation. For a C coefficient equal to  $-3.151052 \times 10^{-2}$ , for example, type its mantissa (an integer and a fractional part with six digits) in the **C** mnemonic and its exponent, as an absolute value, in the **E\_C** mnemonic. In this way, **C** = -3.151052 and **E\_C** = 2.

Note that the signal can be inverted by pressing the key **ZERO** when the number on the display is zero. This changes the signal from + to -, or vice-versa.

The coefficients for the ITS-90 scale according to the IEC-60751 standard are shown below:

$R_0 = 100.00000$	
A = +3.908300	E_A = -03
B = -5,775000	E_B = -07
C = -4,183000	E_C = -12

**MD:** Maximum deviation from the setpoint for the temperature control with an external probe. The temperature is stabilized by the external control after it enters in the range limited by **SET ± MD**. If the external Probe value stabilizes at a value other than the setpoint ± MD value, this value can be increased. The default value for this parameter is 1.0 °C for use with the Dryblock Insert (DRYBLK) and 3.0 °C for use with the Stirred Liquid insert (LIQUID). When changing the insert between solid and liquid, select between DRYBLK and LIQUID, respectively.

⇒ DRYBLK	LIQUID
----------	--------

**SC:** This function scales the input reading. The scaling is very useful in temperature transmitter calibration, for instance, because it displays the current temperature and the transmitter reading (mA) in the same unit. Thus, the error can be verified directly in °C or °F. Select the option **SC** and press **ENTER**. If no input is selected in **IN**, the calibrator will show the **SELECT INPUT FIRST** message. In this case, go to menu **IN** and select the input signal type.

The function **SC** will show **IN** or **NO**. Confirm **IN** to configure the scaling or **NO** to disable the **SC** function, with the key **ENTER**.

The scaling is performed via the **INPUT HIGH** and **INPUT LOW** parameters, corresponding to the maximum and minimum values of the calibrator signal input, in the engineering unit of this signal. Following, configure the **SCALE DEC (0-4)**, **SCALE HIGH** and **SCALE LOW** parameters according to the maximum and minimum values of the transmitter scale and the desired number of decimals. The scaled value is shown on the display with the # unit.

For example, temperature transmitter with 0 to 100 °C input and 4 to 20 mA output. The scaling with one decimal would be:

**INPUT HIGH:** 20.0000 mA

**INPUT LOW:** 4.0000 mA

**SCALE DEC (0-4):** 1

**SCALE HIGH:** 100.0 #

**SCALE LOW:** 0.0 #

**MEM:** The calibrator allows many special programs and functions that can be of frequent use. In situations like this, it would be useful to store the current configuration in memory in order to save time. Up to 8 configurations can be stored in memory.

Selecting the option **MEM**, it is possible to store the current configuration (**WRITE**), restore a previous stored configuration (**RECALL**) or erase the 8 configurations from memory (**CLEAR ALL**).



Selecting the option **WRITE** or **RECALL** will present a new menu with numbers 1 to 8, representing each one of the memory positions. Choose one of the positions and press **ENTER**. The writing operation (**WRITE**) can be made in an already used memory position. The calibrator asks for the overwriting confirmation with the message **OVERWRITE MEMORY?**. The **CLEAR ALL** operation shows a confirming message **ARE YOU SURE?**. In both cases, press **ENTER** to confirm the operation or **C/CE** to cancel.

## 2.3 - Manual Operating Mode

The display shows the selected temperature value of the block and also the current block temperature or thermo-element temperature value.

There are 4 ways in which the information are shown, covering the calibrator input value (**IN**), the block temperature (**PRBi** or **PRBe**, measured with the internal or external probe, respectively) and the temperature setpoint (**SET**). The key ⇄ interchanges the display presentation way:

IN = 23.456 mV	
PRBi/PRBe = 25.01 °C	
PRBi/PRBe = 25.01 °C	
SET = 25.00 °C	
23.456 mV	
25.01 PRi/PRe °C	

The block temperature setpoint is selected directly by the keypad, even if the message **SET** is not being displayed. The numeric keypad enables the **SET** selection in any of the display presentation ways, to change the setpoint.

The setpoint value is increased by key ↑ and decreased by key ↓. While the keys are kept pressed, the setpoint continues to be increased or decreased.

When the display shows the temperature of the External Probe (PRBe), pressing the key ⇄, it will show the value of the resistance read, without the temperature calculation.

## 2.4 - Programmable Operating Mode

Pre-configured programs can be loaded from the calibrator memory, enabling the programmable operating mode. The temperature programmed values of the block are used directly, with no need to enter the setpoint.

The display shows **STEPn** beside the block temperature setpoint value in the programmable mode. The number of the program is indicated by **n**. Using the keys ↑ and ↓, the programmed values of temperature setpoint are changed. The numeric keypad continues available for manual selection of the block temperature in the same way of the manual operating mode.

The automatic scan over the programmed temperatures is implemented by defining the stabilization time of the thermo-element in the block.

The key ⇄ enables the automatic scan over the points. When pressed, the message **STEPn** gives place to **0s** and the calibrator waits for the stabilization time configured from 1 to 9 minutes, by the keys **1** to **9**. The automatic scan is disabled by pressing key ⇄ again.

A countdown of the stabilization time is only started when the block temperature reaches the programmed temperature and stabilizes within a range of approximately  $\pm 0.05$  °C. At this time the buzzer beeps, in case it is configured to **YES**.

## 2.5 - Automatic Operating Mode

The thermo-element calibration is performed in an automatic way by the calibrator. The configuration, as well as the calibration verification is carried out by the calibrator itself. Also it is possible to use the ISOPLAN software and its work orders, like a CAC - Computer Aided Calibration.

The independent automatic calibration, without the use of ISOPLAN, is planned in the option **TAGMAN** from menu **COM**.

<b>TAG</b>	<b>EXEC</b>	<b>VERIF</b>
<b>ADDRESS</b>	<b>⇒ TAGMAN</b>	

Before you start programming, configure first the signal that will be read by the calibrator in the menu **IN**. To calibrate glass thermometers, for example, there is no electric signal to be read. In this case, option **IN** from the menu must be configured to **NO** and the calibrator will ask to enter the value indicated by the thermometer, at the end of the stabilization time of each calibration point.

The data for an automatic calibration concern:

- **TAG**: the thermo-element tag identification.
- **SP**: the block temperature reference values for the calibration (calibration points).
- **TOL**: the maximum tolerance for the thermo-element operation.
- **STB**: the stabilization time, in seconds, so that the thermo-element temperature indicates correctly. This timer starts just after the block reaches and stabilizes at the setpoint temperature.
- **STR**: the calibration strategy of the programmed reference values. The available strategies are:  $\uparrow$  (UP),  $\downarrow$  (DOWN),  $\uparrow\downarrow$  (UP - DOWN),  $\downarrow\uparrow$  (DOWN - UP),  $\uparrow\downarrow\uparrow$  (UP - DOWN - UP) and  $\downarrow\uparrow\downarrow$  (DOWN - UP - DOWN).
- **RP**: the strategy number of repetitions.
- **RGI**: the thermo-element indication range.
- **RGO**: the operating temperature range that corresponds to the indication range above.

The automatic calibration begins when the option **EXEC** from menu **COM** is selected. All the operations are automatically performed by the calibrator. The keypad does not work until the end of the calibration.

At the end of the stabilization time, the calibrator stores the thermo-element reading in memory and goes to the next point, in case some input signal has been previously configured in the menu **IN** and connected to the calibrator terminals.

The **CALIBRATION END** message appears on the display at the end of the automatic calibration. Press **ENTER** to confirm. The results can be verified in option **VERIF** from menu **COM**.

The first message in option **VERIF** informs the calibration result, with the number of points that have succeeded. Following, press **ENTER** to verify each one of the readings performed by the calibrator. The keys  $\Rightarrow$  and  $\Leftarrow$  interchange 2 screens: one that displays the block and thermo-element temperature value and the other displays a message indicating the calibration point number and its state (**OK** or **FAIL**), besides the error value in %.

The option **TAG** from menu **COM** can present a list of up to 4 tags that have been downloaded or uploaded with the ISOPLAN software. The key **ENTER** selects the tag to be calibrated from the tag list. The automatic calibration starts by the option **EXEC** from menu **COM** and the calibration data can be verified in option **VERIF**. To calibrate automatically not using ISOPLAN, there is a reserved place for one manual tag. The selection of the manual tag is performed by confirming the option **TAGMAN** with the key **ENTER**.

The option **ADDRESS** selects the communication address of the calibrator. The communication protocol used is ModBus - RTU, with no parity and baud rate of 9600. The calibrator communication with the computer can use RS-232 or RS-485, for network option, according to the communication interface used. In order to communicate with the ISOPLAN software, configure **ADDRESS** to 1.

### 3 - Recommendations as regards Accuracy of Measurements

**PRESYS** dry block temperature calibrators are instruments of high accuracy level, requiring the observation of all the procedures described in this section, in order to achieve the necessary conditions to get the accuracy levels during the calibrations.

- Special attention should be paid in relation to the insert cleanliness. When necessary, it should always be washed with water and soap, well rinsed and dried. Oil, grease, solid particles can hinder the heat transference to the insert and even jam the insert inside the block.
- The sensor to be calibrated must fit snugly into the appropriate well. In case the sensor is loose, the measurement accuracy meaning can be completely senseless. The meaning of clearance between the sensor and the respective well should be understood in a subjective way and the common sense is very important. Thus, the sensor should enter the insert well (both completely clean) in such a way to stay snugly enough so that it cannot move or swing inside but it should not enter by force to get jammed.
- In the specific case of generating negative temperature, the calibrations should be performed in a descending temperature order. This procedure is useful because in negative temperatures ice is formed in the insert surface and between the insert and the thermo-element being calibrated. This humidity change the thermal contact and cause error in the calibration. After finishing the use of the insert below 0 °C, increase the setpoint to a positive temperature value, withdraw the insert from the block and the sensor, dry completely all these parts before continuing the calibration. This procedure guarantees accuracy next to  $\pm 0.1$  °C. In case you can accept higher values of accuracy, like  $\pm 0.2$  °C or more, these cares can be left apart.

#### 3.1 - Getting a Better Accuracy from the Dry Block

The temperature control is based in the temperature measurement of an internal sensor placed in the block.

This control sensor is adjusted in factory by means of another sensor with high accuracy (probe) connected to a standard thermometer, as described in item 6.2 - *Probe Calibration*. So, at factory, the accuracy of the standard thermometer is transferred to the dry block calibrator. The transference will be well performed only when there is a perfect temperature equilibrium between the internal control sensor and the standard thermometer. Therefore, it should not have any clearance between the insert and the block or between the probe and the insert. Both the internal sensor and the probe should also be at the same depth.

The user will get the best accuracy from the dry block, provided in this technical manual, in case one succeeds in reproducing the same conditions of the factory adjustment, that is, the same insert used in factory, no clearance, same depth etc.

Summing up, the important thing to get the best accuracy from the dry block is to reproduce the process used by the factory to adjust the dry block itself.



When a higher accuracy than that mentioned in the technical manual is necessary, one should use an external standard thermometer as a reference or standard to compare with the thermo-element under calibration.

In this case, the dry block is only used as a heat generator, not as a standard temperature calibrator. The user can use the fact that the dry block stability value is much lower than its accuracy value. So, placing the standard thermometer sensor and the thermo-element under calibration in a two-hole-insert, it is possible to compare both measurement temperatures.

### 3.2 - Recommendations to Other Types of Insert

When the user uses a different type of insert, other than the one used to adjust the dry block, for example the cup like insert with stirred liquid, the accuracy from the manual is no longer valid, since the thermal contact is different in relation to that insert.

However, another control sensor adjustment can be performed to the new insert. Do that using an external probe with high accuracy, placed in the new insert and follow the steps described in item 6.2 - *Probe Calibration*.

This new readjustment of the calibrator indication overwrites the factory calibration and it remains even after turning off the dry block.

Should you want the factory calibration back again, activate the option **RESTORE** from menu calibration / probe.

## 4 - Safety Instructions

- If the calibrator is turned on, do not leave the room without an identification or warning about the high temperature hazard.
- Before turning the calibrator off, return the block temperature to values close to the ambient temperature.
- Never remove the insert from the dry block or the thermo-elements from the insert, while they are in temperatures far from the ambient. Wait until they reach the ambient temperature so that the heterogeneous cooling of the parts do not jam each other.

## 5 - Calibrator Warning Messages

Warning	Meaning	Procedure
RAM ERROR READ MANUAL	Problem in RAM memory	Turn the calibrator off and on. If the error persists, contact Presys Technical Support
EEPROM ERROR READ MANUAL	Problem in EEPROM memory	Same as the previous item
LOW BATTERY	Level of battery voltage is low	Check the calibrator power supply
UNDER / OVER	Input signal out of specifications or scaling range	See item 1.1.1 on Input Specifications
????.?°C	Input sensor is open	Check input connections and sensor
PRBe = ????? °C	External Probe is open	Connect an external probe or disable the external Probe function in CONF > PRG> PRBe> NO

## 6 - Calibration (Adjustment)

**Warning:** Enter the following options only after understanding them completely. Otherwise, it may be necessary to return the instrument to the factory for recalibration!

Select **CAL** option from the main menu and press the **ENTER** key. You should then enter the password (**PASSWORD**) 9875 to access the calibration menu.

The password functions as a protection to calibration ranges. After the password is entered, the menu displays the options:

⇒ IN	OUT	DATE
------	-----	------

You should then choose the input range (**IN**) as the output range (**OUT**) is not available for the user. **DATE** is an option which allows you to record the date on which the calibration was performed and once it has been filled in, it will be displayed every time the calibrator is turned on.

Options for **IN** calibration are:

⇒ mV	mA	OHM	CJC
PROBE			

## 6.1 - Input Calibration

Select the corresponding mnemonic and apply the signals presented in the tables below.

When calibrating inputs, the display shows on the 2<sup>nd</sup> line the value measured by the calibrator and on the 1<sup>st</sup> line the same value is expressed as a percentage.

Note that the applied signals just need to be close to the values shown in the table.

Once the signal has been applied, store the values of the 1<sup>st</sup> and 2<sup>nd</sup> calibration points, by pressing keys 1 (1<sup>st</sup> point) and 2 (2<sup>nd</sup> point).

mV Input	1 <sup>st</sup> point	2 <sup>nd</sup> point
G4	0.000 mV	70.000 mV
G3	0.000 mV	120.000 mV
G2	0.000 mV	600.000 mV
G1	600.000 mV	2400.000 mV

mA Input	1 <sup>st</sup> point	2 <sup>nd</sup> point
Single range	0.0000 mA	20.0000 mA

Input calibration for  $\Omega$  is performed in two steps:

a) Application of mV signal:

For the calibration below, leave terminals RTD3 (+) and RTD4 (+) short-circuited.

mV Signal	Terminals	1 <sup>st</sup> point	2 <sup>nd</sup> point
V_OHM3	RTD3(+) and mV(-)	90.000 mV	120.000 mV
V_OHM4	RTD4(+) and mV(-)	90.000 mV	120.000 mV

b) Application of standard resistors:

Connect a decade box or standard resistors on terminals RTD1, RTD2, RTD3 and RTD4 (4-wire connection).

resistors	1 <sup>st</sup> point	2 <sup>nd</sup> point
OHM3	20.000 $\Omega$	50.000 $\Omega$
OHM2	100.000 $\Omega$	500.000 $\Omega$
OHM1	500.000 $\Omega$	2200.000 $\Omega$

The cold junction calibration (CJC) is performed measuring the mV(-) terminal temperature. Store only the 1<sup>st</sup> point.

Cold Junction	1 <sup>st</sup> point
CJC	32.03 °C (measured value)

## 6.2 - Probe Calibration

The options of calibration / probe are:

⇒ °C	RESTORE
------	---------

**°C:** Adjust of the internal temperature sensor (internal Probe).

**RESTORE:** Restores the internal temperature sensor calibration parameters to the factory values.

To readjust the internal Probe it is necessary to compare the value indicated by the calibrator (Probe) and the temperature value from an external probe placed in the dry block insert. The temperature of the external probe should have high accuracy and should be measured by a standard thermometer.

The option to adjust the internal sensor has seven points of adjustment. These points are recorded via keys 1 to 7.

Before starting the calibration (adjustment), record in these points the respective initial storing values, according to the table below.

Go to the manual operating mode (menu **EXEC**) and generate all the seven levels of temperature (setpoints from the table), writing down the value indicated by the standard thermometer. Now, go back to the option **CAL > Probe > °C** and record the values indicated by the standard thermometer. All values must be in °C unit.

### For T-25NL

Setpoint of the temperature generated	Initial value to record	Standard Indication	New value to record	New indication of the Standard	key
-25	-25.00	-24.780	-24.78	-24.995	key 1
-2	-2.00	-2.103	-2.10	-2.005	key 2
30	30.00	29.910	29.91	29.990	key 3
60	60.00	59.771	59.77	60.009	key 4
90	90.00	89.770	89.77	90.000	key 5
120	120.00	119.630	119.63	119.995	key 6
140	140.00	139.539	139.54	140.005	key 7

### For T-45NL

Setpoint of the temperature generated	Initial value to record	Standard Indication	New value to record	New indication of the Standard	key
-45	-45.00	-44.780	-44.78	-44.995	key 1
-2	-2.00	-2.103	-2.10	-2.005	key 2
30	30.00	29.910	29.91	29.990	key 3
60	60.00	59.771	59.77	60.009	key 4
90	90.00	89.770	89.77	90.000	key 5
120	120.00	119.630	119.63	119.995	key 6
140	140.00	139.539	139.54	140.005	key 7

## **7 - Maintenance**

### **7.1 - Instructions for Hardware Maintenance**

There are no parts or components in the temperature calibrator that can be repaired by the user. Only the 6 Amp fuse, placed within the socket on the rear can be replaced by the user.

The fuse may blow due to a voltage spike in the mains or a calibrator component fault. Replace the fuse once. If a second fuse blows again, it is because the fault is not that simple. Contact Presys Technical Support.

### **7.2 - Instructions for Insert Jamming**

If, by chance, it happens that an insert jams inside the block or a sensor jams inside a insert, proceed as follows:

- 1- apply a lubricant oil between the parts;
- 2- apply cooling liquid inside the insert wells in order to contract the insert;
- 3- try again to withdraw the insert.

For insert jamming cases, after taking it out, sand both the surfaces with a thin sandpaper, polish them with an suitable paste and finally clean the parts using alcohol or solvent.

